


CZ Service Manuals

RiD003770

**How to clean drain solenoid valves
at GS series**

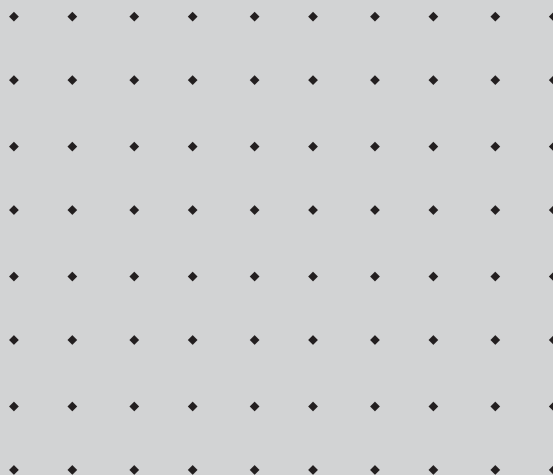



RiD003770


How to clean drain solenoid valves at GS series

Contents

This issue cause the volumetric tube not to seal, or not to drain.

Step 1:


POWER OFF and UNPLUG the power from the bench.

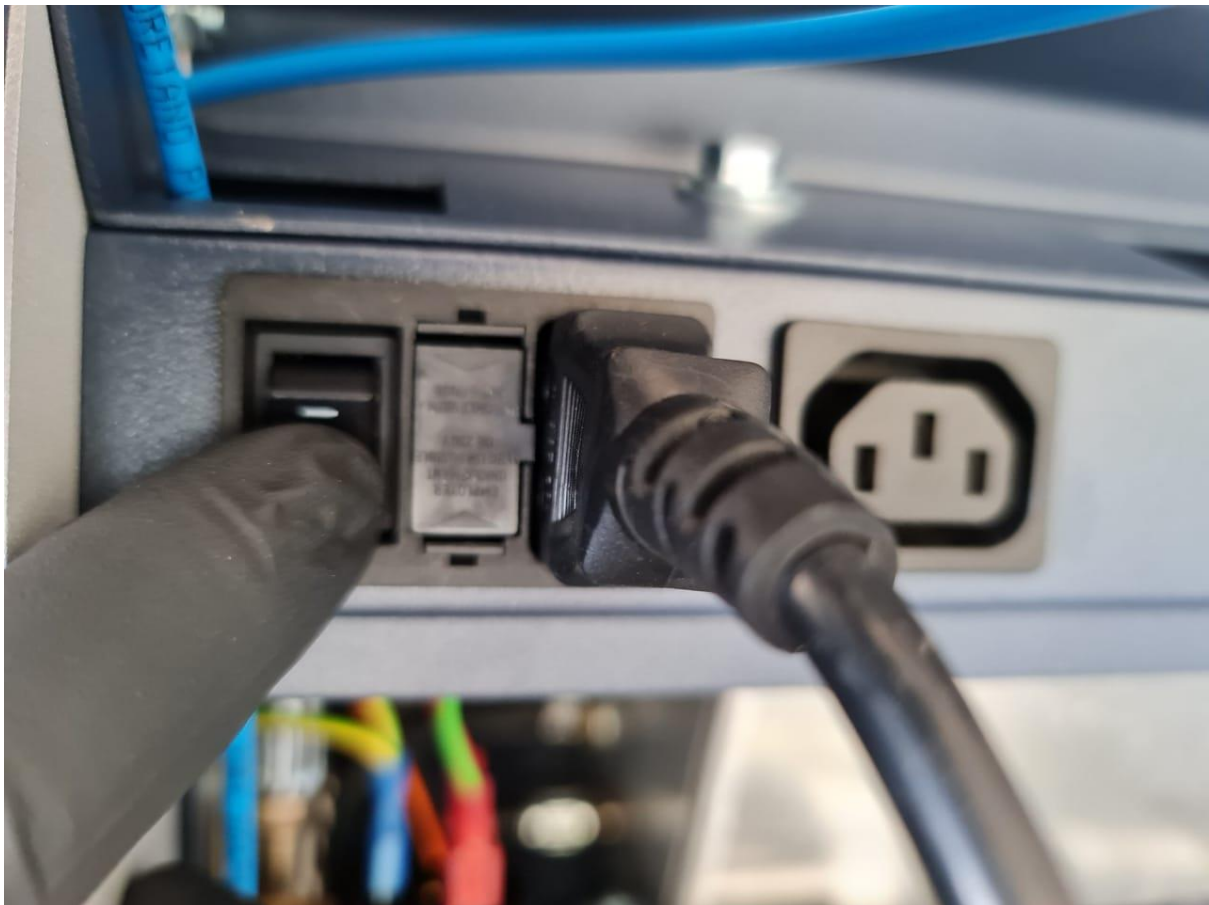


Step 2:

Remove the front panel.



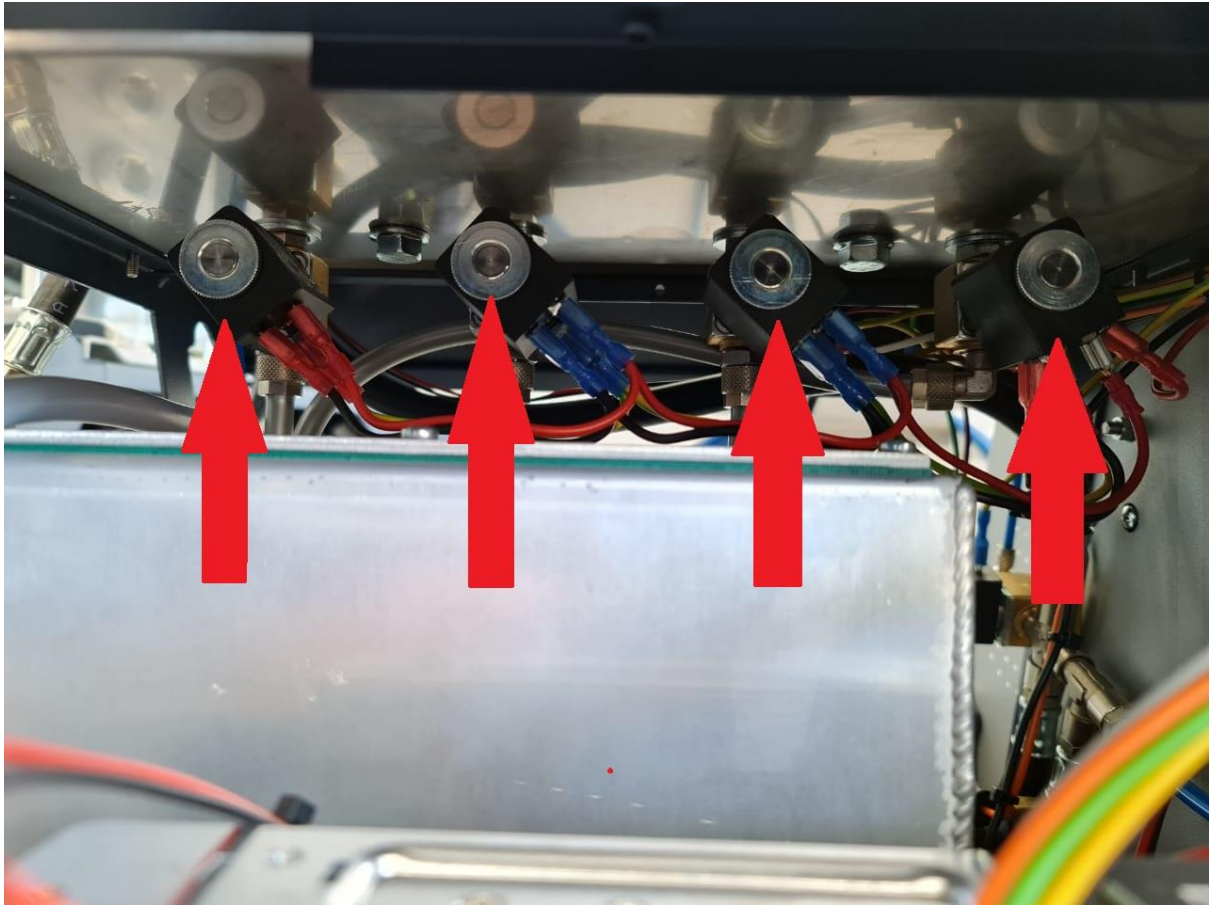


Step 3:
Remove the nut

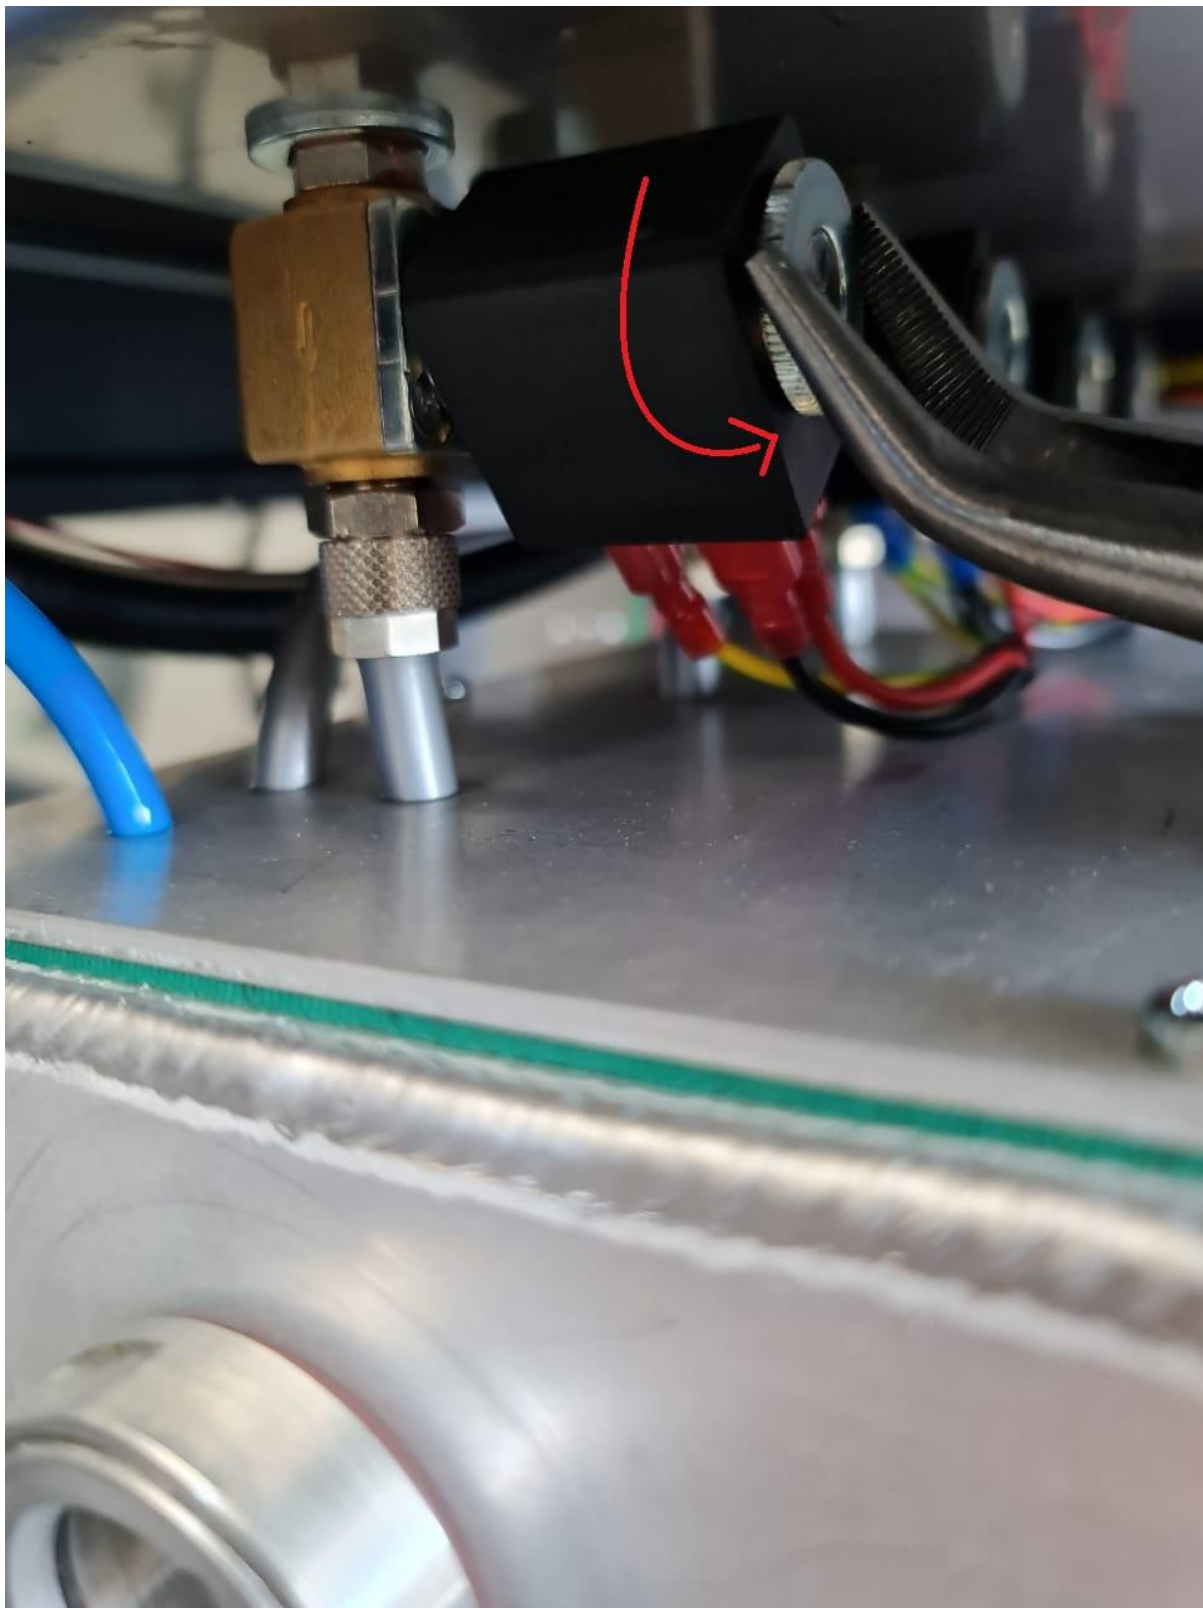

Step 4

Remove the coil and all the parts carefully.

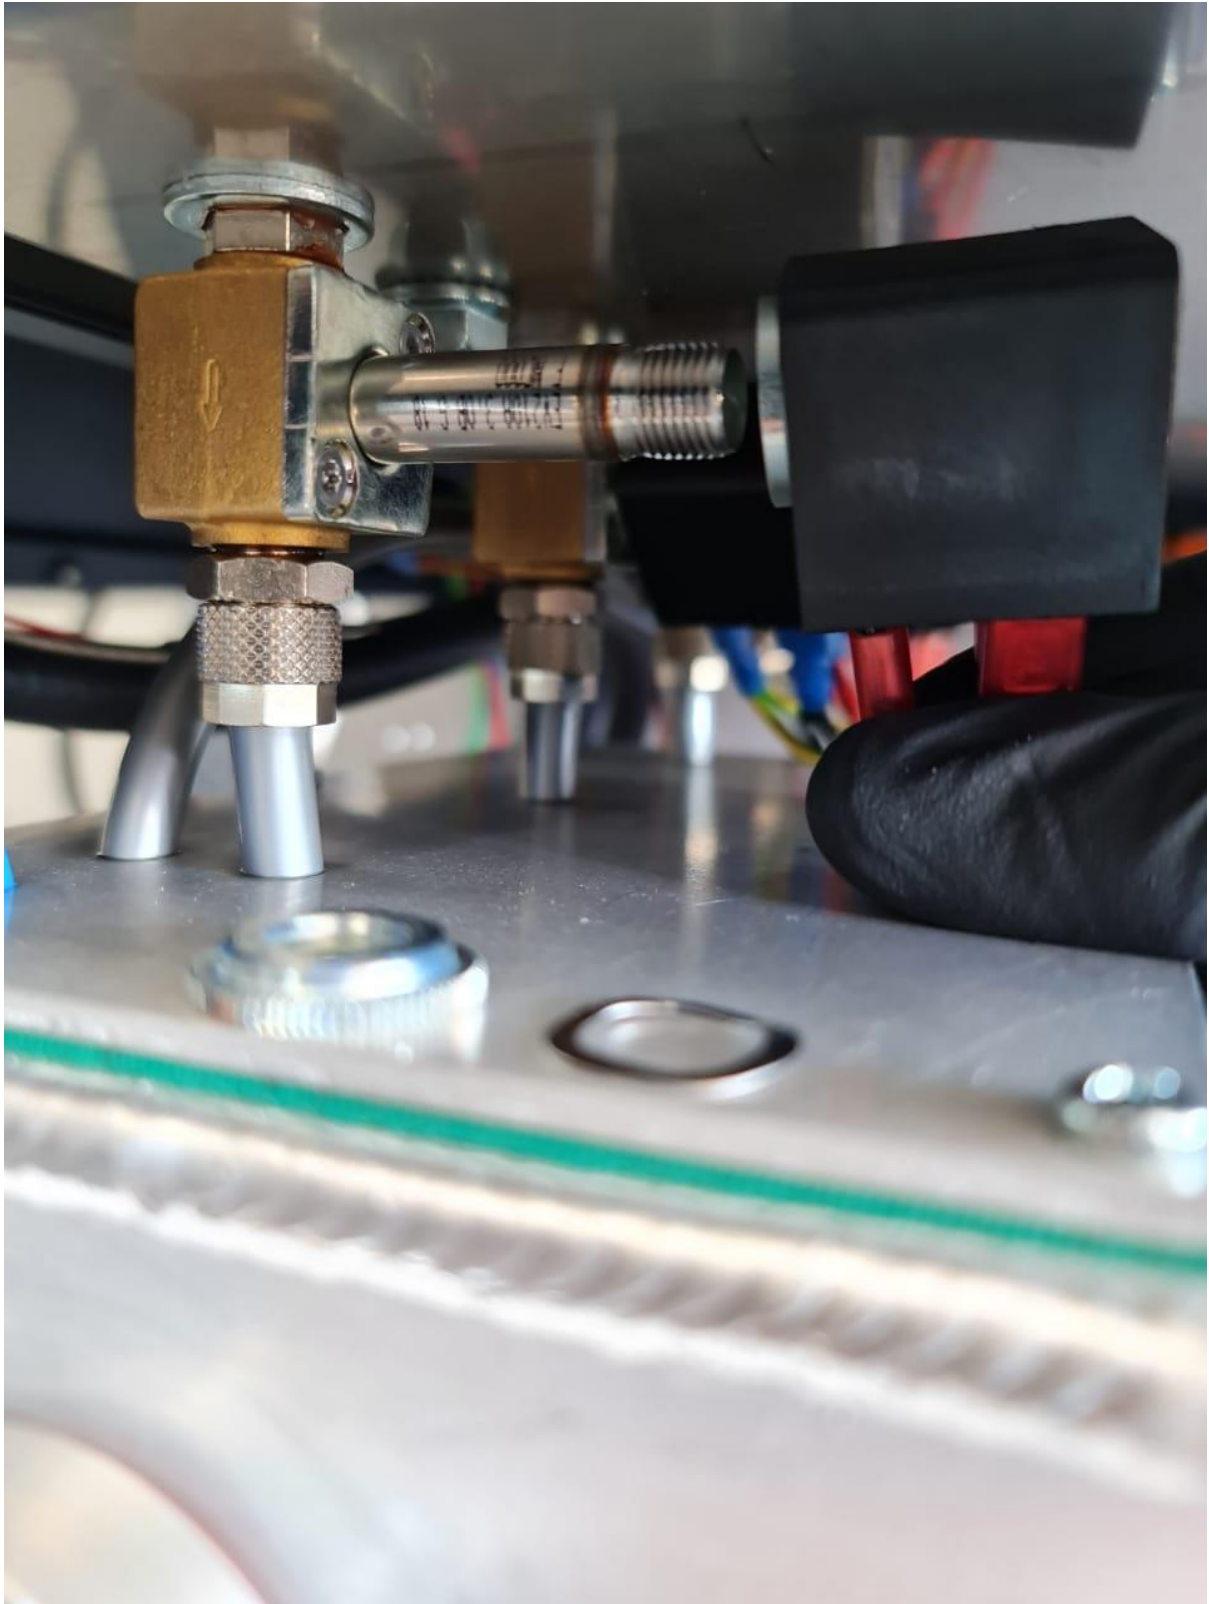

:


Step 5

Then unscrew two screws on the valve.



Step 6


Remove carefully the body and the pilot inside the valve.

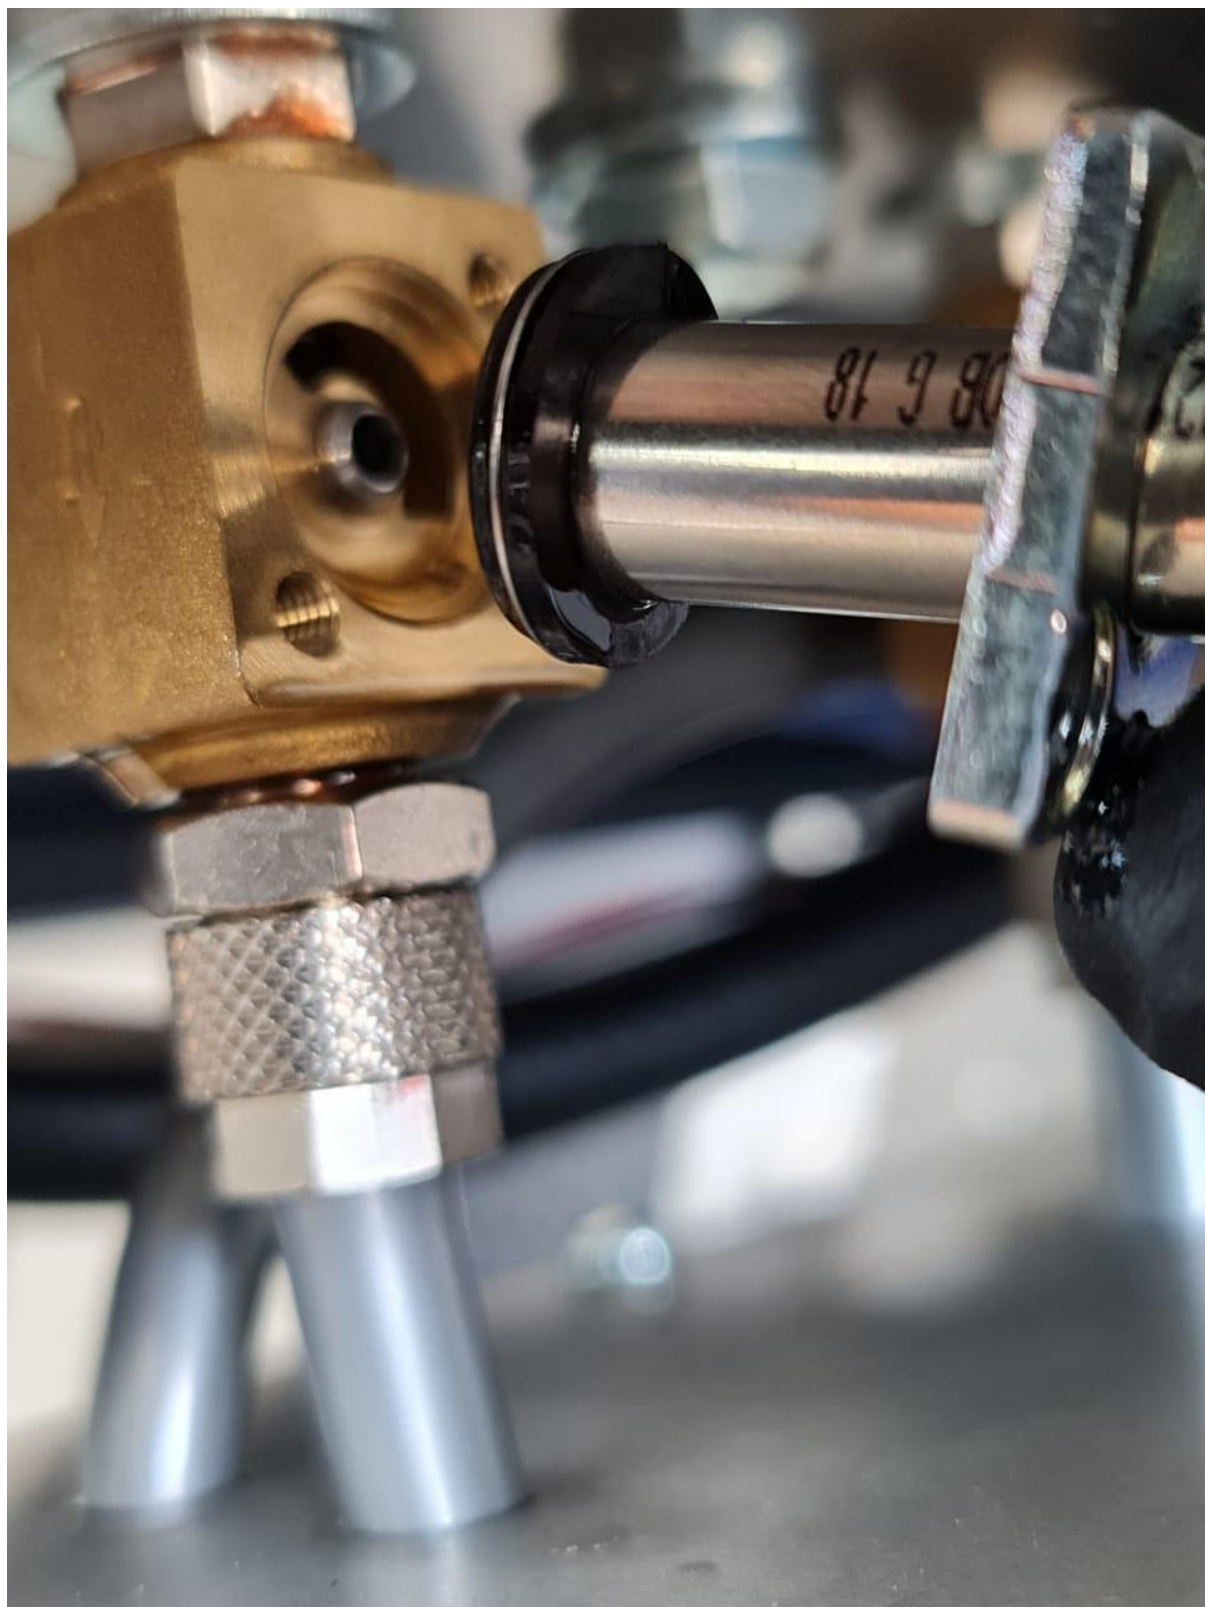




Step 7

Flush with pressurized air the body and the pilot, in order to remove the dirty parts..

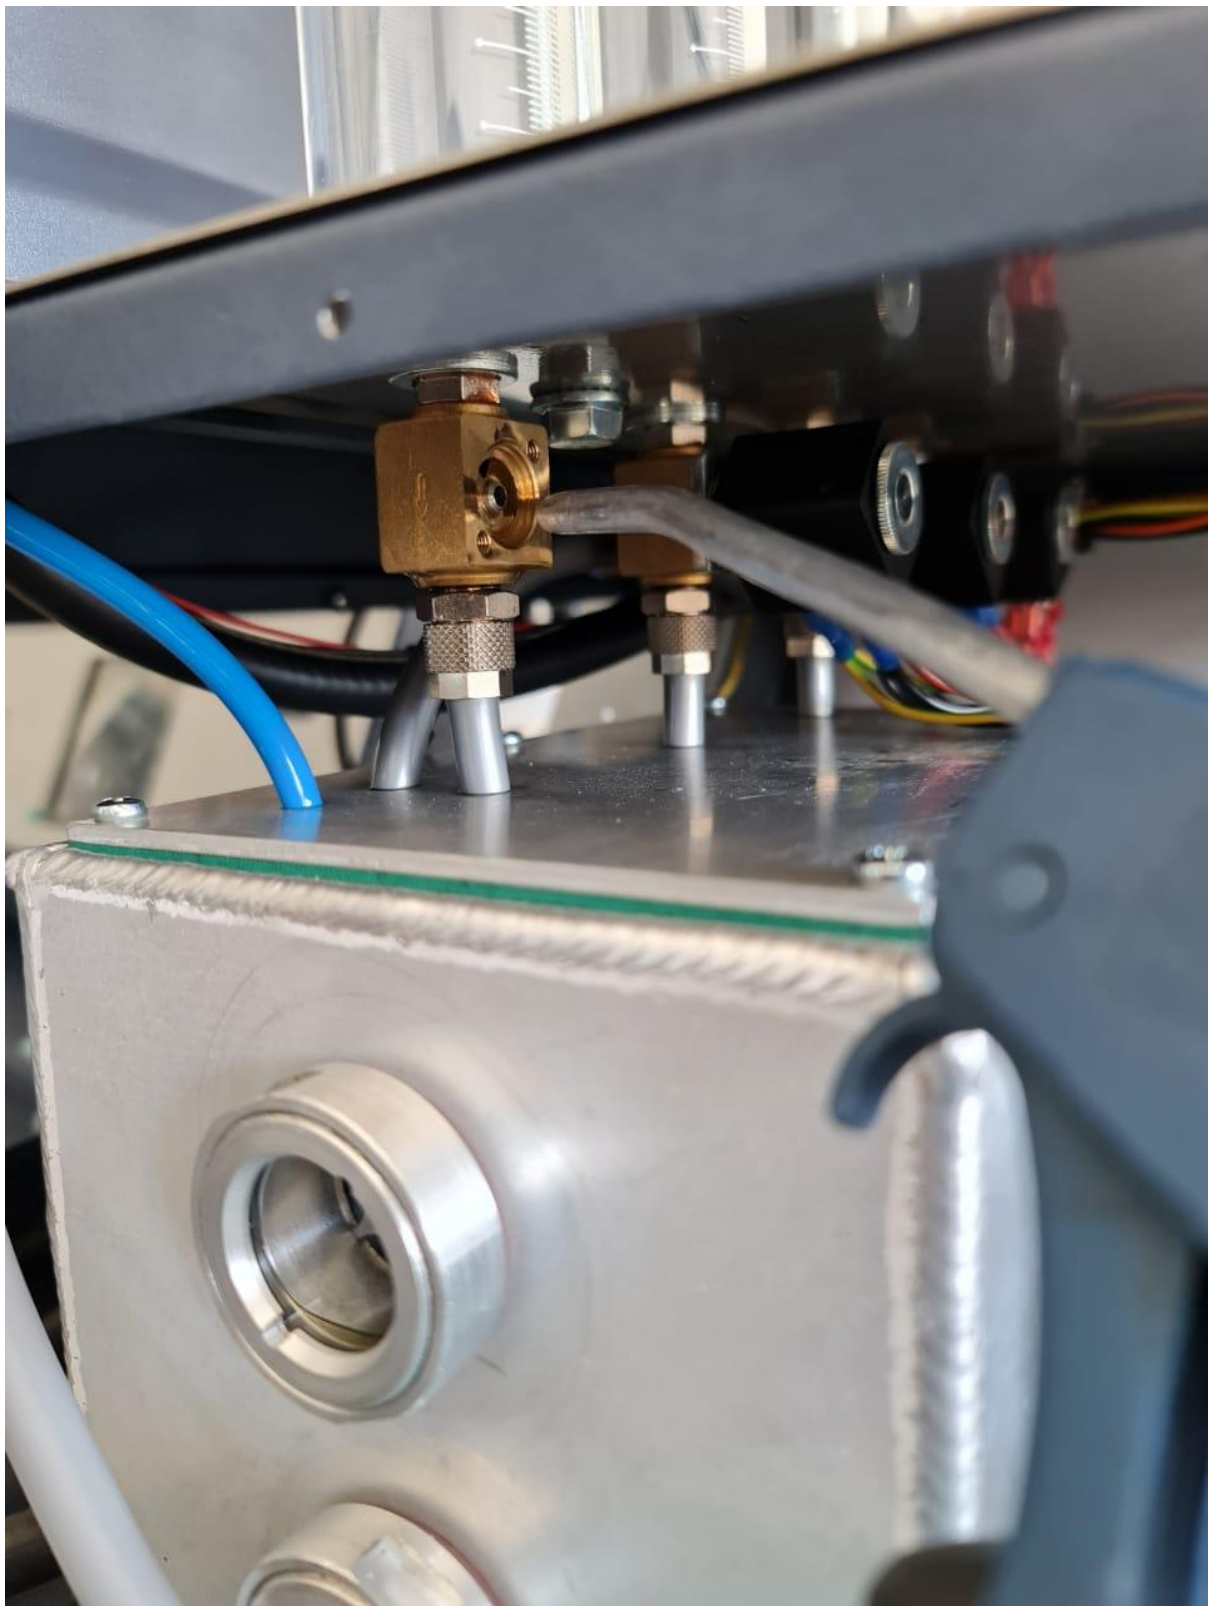


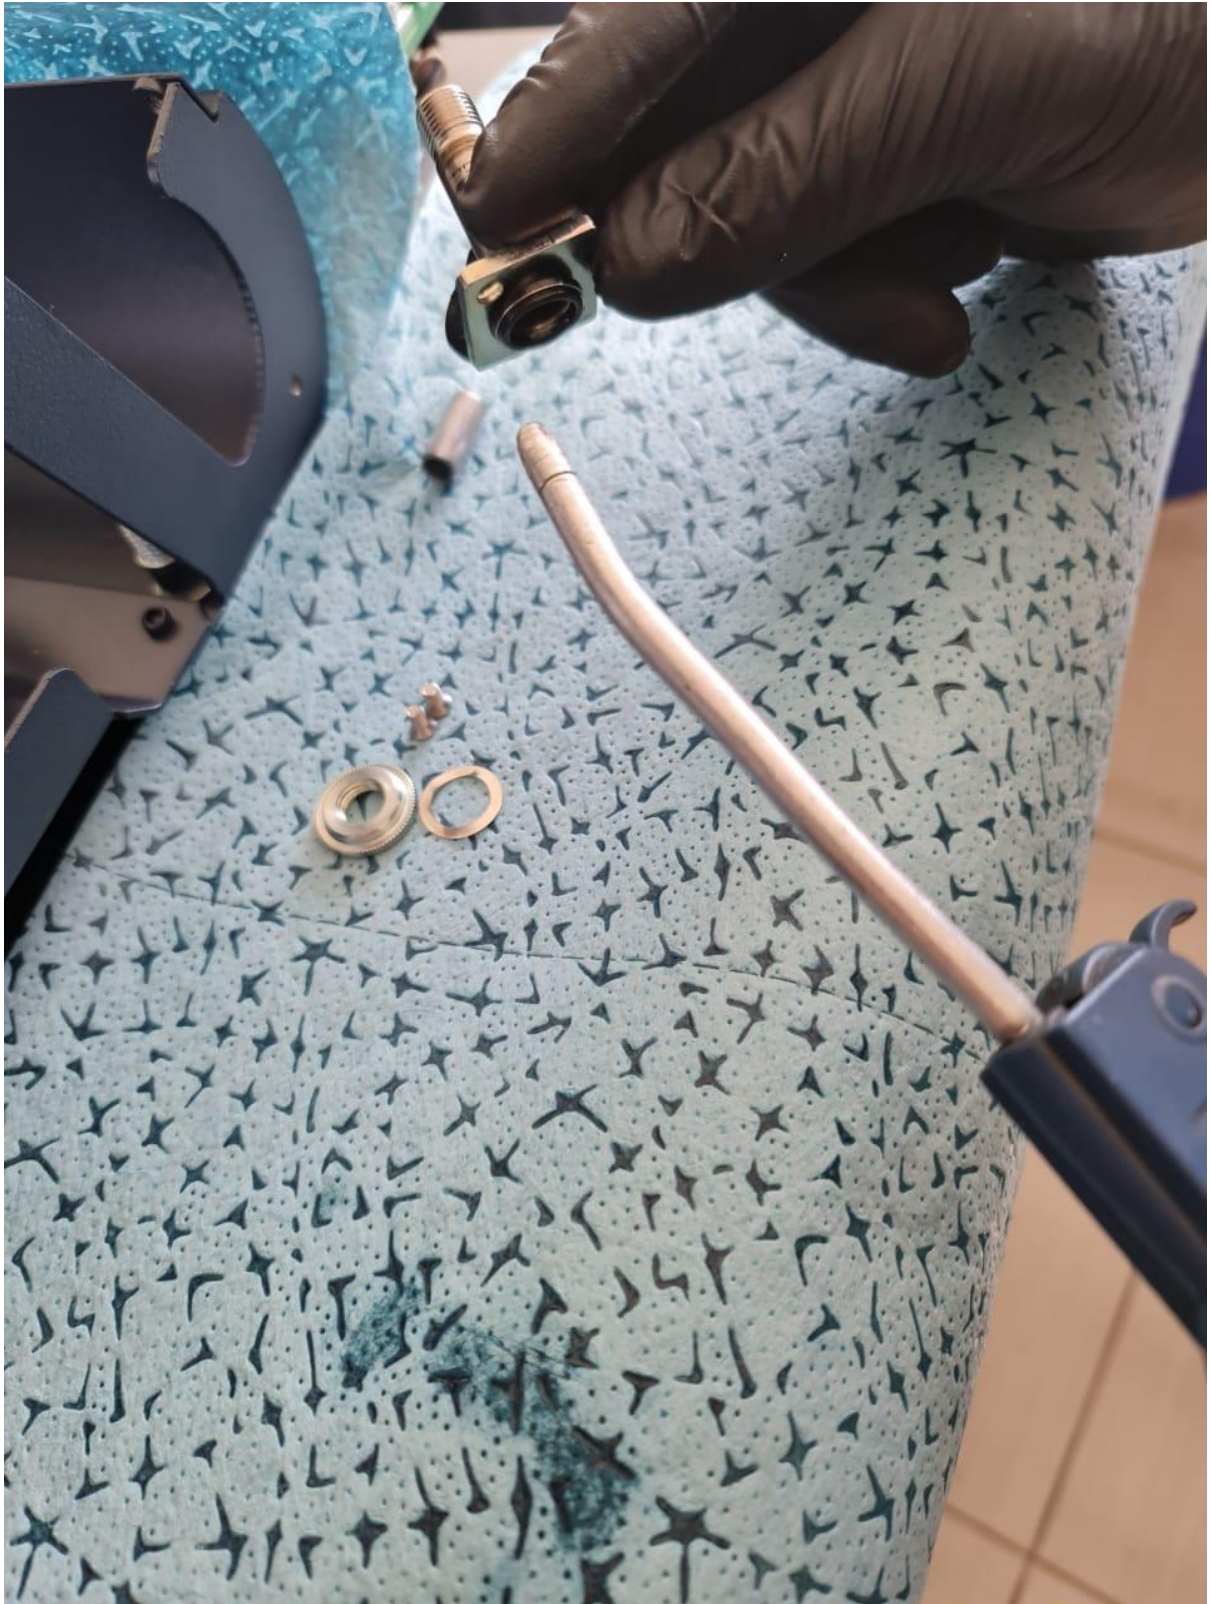



Step 8

Install all the parts clean and carefully at the original state.

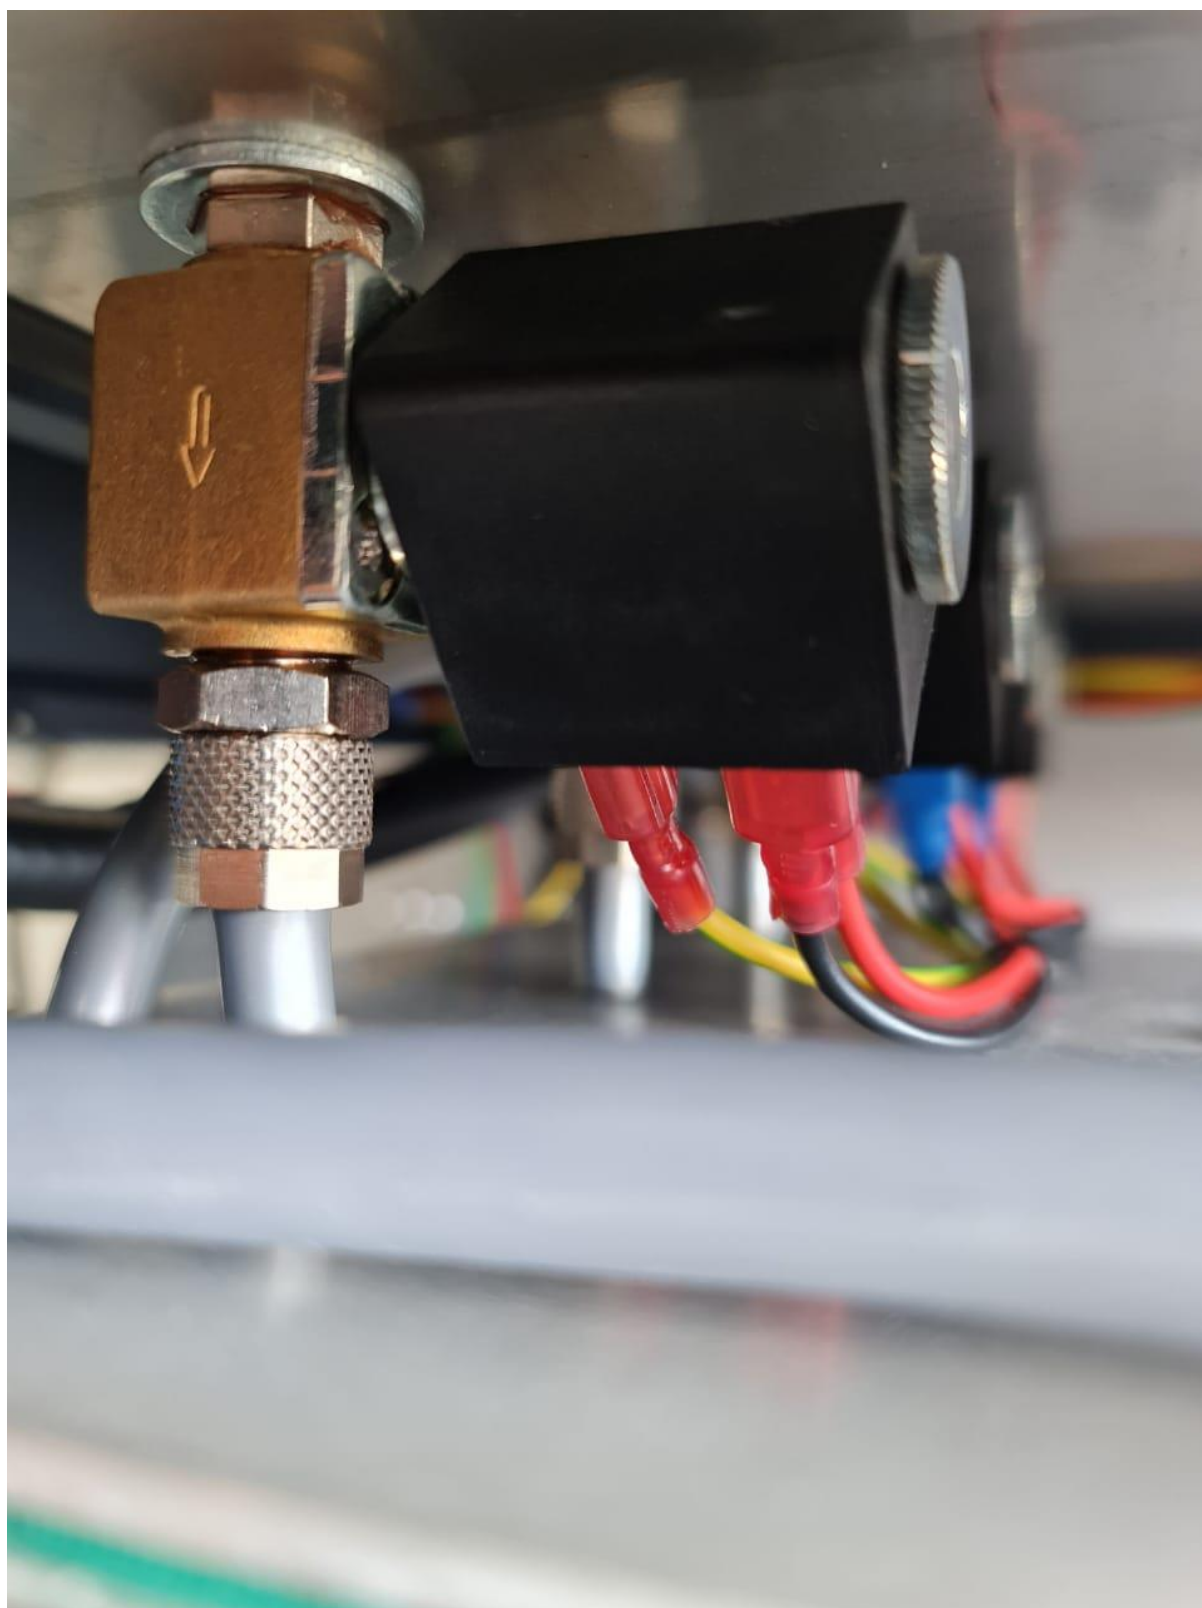

**Main Offices & Production Plant**

364 Varis-Koropiou Ave. Koropi
194 42 Athens, Greece

Headquarters

A.I.S. GmbH
75438 Knittlingen, Germany

email contact@carbonzapp.com

tel +30 210 9856110

fax +30 210 9928655

Support / Sales Telephone

+30 210 98 56110

Support email

support@carbonzapp.com

TeamViewer email

tv@carbonzapp.com

Sales email

office@carbonzapp.com

carbonzapp.com

